























## Kanalplan Kabel-TV

	Kanal	Frekvens	Kanalplats
	SVT 1	182,25 MHz	E06
	SVT 2	175,25 MHz	E05
	TV 3	252,25 MHz	S14
	TV 4	189,25 MHz	E07
	Kanal 5	231,25 MHz	S11
	TV 6	140,25 MHz	S06
	Sjuan	245,25 MHz	S13
	TV 8	210,25 MHz	E10
	Kanal 9	266,25 MHz	S16
	TV 10	203,25 MHz	E09
	TV 11	196,25 MHz	E08
	TV 4 Film	287,25 MHz	S19
	Disney Channel	280,25 MHz	S18
	SVT24/Barnkanalen	154,25 MHz	S08
	BBC	238,25 MHz	S12
	Eurosport	273,25 MHz	S17
	TV 12	217,25 MHz	E11
	Discovery	224,25 MHz	E12
	TV 4 Fakta	259,25 MHz	S15
	Kunskapskanalen	147,25 MHz	S07
	INFO-kanal	161,25 MHz	S09
	FM Radio		